


ITEM	PART#	QTY.	DESCRIPTION
1	6020-1	1	Right Side Mounting Bracket
2	6020-2	1	Left Side Mounting Bracket
3	6020-3	1	Rear Center Bracket
4	HDW2069	4	5/16 x 3/4 Carriage Bolt
5	HDW7056	4	5/16 Serarated Flange Nut
6	6021HO	1	Crossbar Support Tube

SNOWMOBILE REAR ACCESSORY MOUNTING BRACKET PART# 6020

This is the main frame of the snowmobile rear accessory mounting bracket. You will assemble with the carriage bolt and nuts as shown in image below. The rear center bracket will go on the outside of the right and left side mounting bracket and the bolts will go from the outside in with nuts on the inside. The crossbar tube can mount in any hole position along the side mounting brackets using the bolts that came with the cross bar.

NOTE: The twist locs will not come with this part they must be purchased separately or at time of purchasing the mount kit depending on how your mounting it or how many you may need. They are part number 5322HO that is a set of 2. This mount kit is made to mount on the Ski-Doo sleds with the quick Loc system.

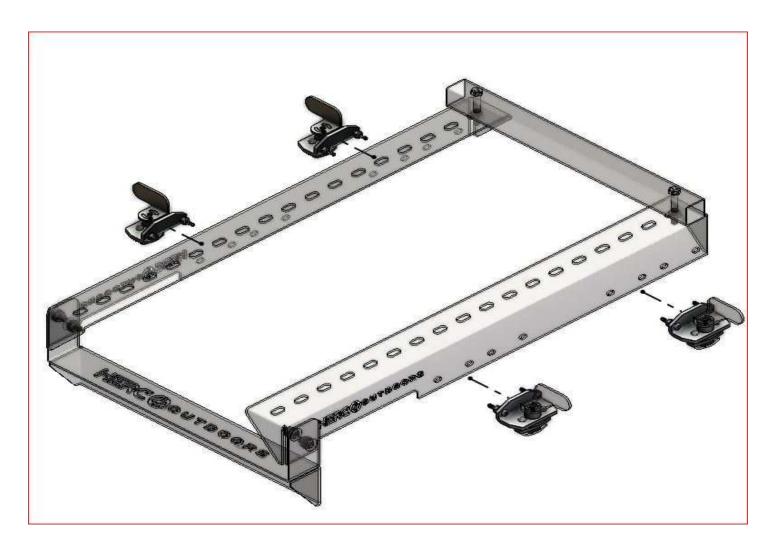

Questions or Comments Call: 320-964-1616, Monday thru Thursday, 7:00 to 4:30 CST

INST6020HO