ITEM	PART#	QTY.	DESCRIPTION
1	1588-1	1	Winch Mount Plate
2	HDW1052	2	8mm x 25mm Hex Bolt
3	HDW9403	2	5/16 x 1-1/8 X 2-3/16 Rd. U-Bolt
4	HDW9002	4	5/16 Flat Washer
5	HDW7058	4	5/16 Nylock Nut

Winch Mount Installation Instructions HONDA TRX300 93-00

(Roller Fairlead does not come with mount)

Attach winch to winch mount plate using the hardware provided with the winch. Make sure the winch cable is spooling off the bottom of the drum.

You may have to remove the front bumper to get the winch and mount up into place or you can try to slide up in place through the inside of the front fender well.


Remove the 2-8mm bolts in the center of the bumper mounting location.

Place winch mount with winch in place as drawing shows then align the 2 downward tabs on the winch mount with the location you removed the 2-8mm bolts from on the center bumper mount location and use the 2-8mm x 25mm bolt provided in the mount kit.

Now attach the upper portion with the 2 U-bolts provided going up around frame tube and through the winch mount and secure with 5/16 washers and 5/16 nylock nuts. Tighten all bolt securely.

Attach roller fairlead to the front with hardware provided with the winch and wire accordingly to winch manufactures instructions.

When installing with some winches it may required to remove the black plastic headlight cover for clearance on the winch motor.

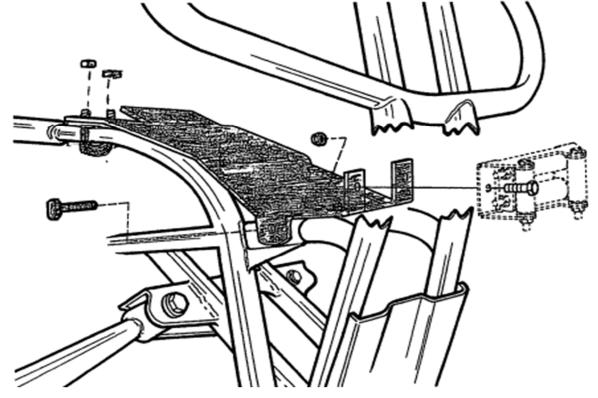

FOR QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616 (company hours Monday thru Thursday 7:00-4:30 CST)