

ITEM	PART#	QTY.	DESCRIPTION
1	1599-1	1	Main Winch Mount Plate
2	1591-2	1	Fairlead Plate
3	HDW2051	2	5/16 x 1 Hex Bolt
4	HDW9002	4	5/16 Flat Washer
5	HDW2002	6	1/4 x 1 Hex Bolt
6	HDW9012	6	1/4 Flat Washer
7	HDW7050	6	1/4 Nylock Nut

NOTE: On the 300 air-cooled models use the (6) 1/4 x 1 bolts and nylock nuts in the holes on the side of the grill. This can


Winch Mount Installation Instructions

for Polaris 96-03 500 Sportsman 4x4, 00-08 500 Sportsman 6x6, 99-00 500 Magnum 4x4, 97 500 Xplorer 4x4, 04-05 500 ATP H.O., 00 425 Xpedition 4x4, 01-03 400 Sportsman 4x4, 95-02 400L Xplorer 4x4, 98-00 335 Sportsman 4x4, 04-05 330 ATP, 03-06 330 Magnum 4x4, 00-02 325 Magnum 4x4, 96-99 300 Xplorer 4x4, 99-00 Diesel 4x4

also be done on the liquid cooled models as an option.

- 1 – Temporarily remove the 2 bolts per side that hold the upper radiator protectors and the 3 screws down the side. These holes should be threaded already. The reinstall the screws that were removed from the plastic side shrouds.
- 2 – Install the winch mount plate on the front of the grill using the 5/16 x 1 hex bolts, washers in the top bolt location.
- 3 – Install winch onto plate using hardware provided with winch and make sure the fairlead plate is between winch and Mount. Mount fairlead with hardware provided with winch also.
- 4 – Wire winch to winch manufactures instructions.

NOTE: Roller fairlead not included with this kit!

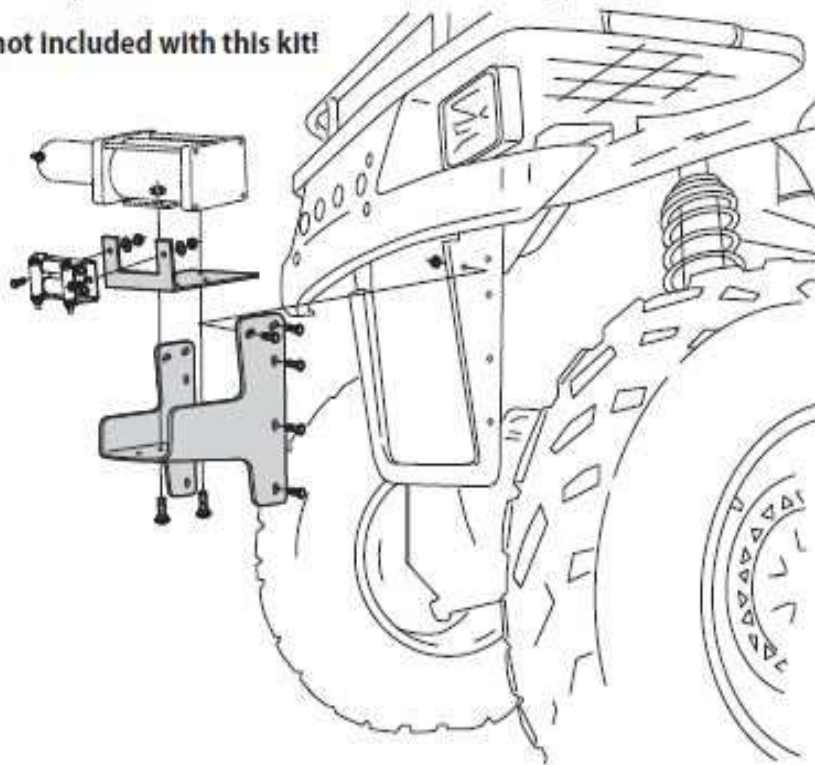

FOR
QUESTIONS OR COMMENTS PLEASE CALL: 320-964-1616

INST1599

(Hours are 7:00 to 4:30 CST Monday thru Thursday)