


Item	Qty.	Part#	Description
1	1	1177-70	Receiver Hitch


# 2" Receiver Hitch

## Can-Am Outlander

1. Remove the stock ball hitch from the rear differential. Save the hardware.
2. Install the receiver hitch to the rear differential in place of the factory ball hitch using the factory hardware.

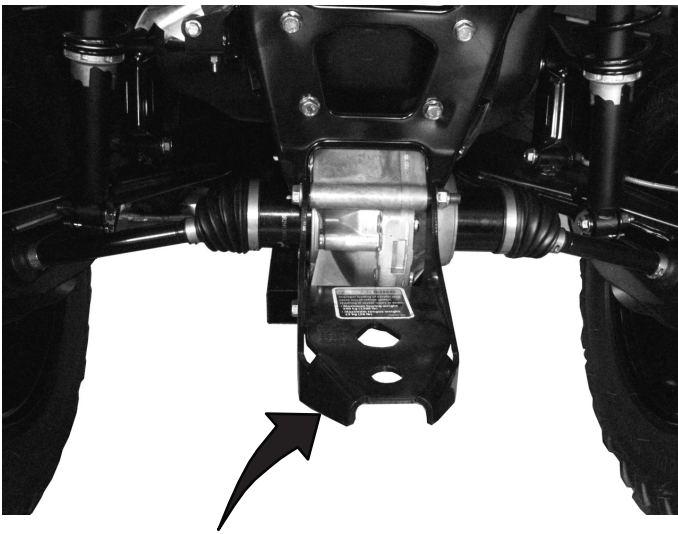

A. Remove the factory ball hitch.

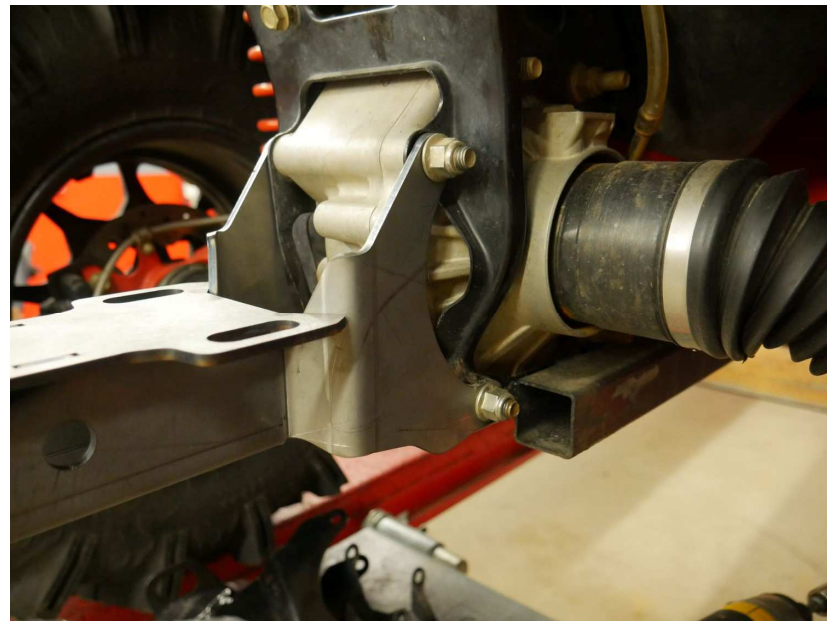

**NOTE: DO NOT EXCEED THE MANUFACTURERS RECOMMENDED TONGUE WEIGHT OR TOWING CAPACITY OF YOUR ATV. THESE RATINGS CAN EITHER BE FOUND ON A DECAL ON THE REAR OF THE MACHINE OR IN YOUR OWNERS MANUAL. EXCEEDING THESE MAXIMUM WEIGHT RESTRICTIONS IS CONSIDERED ABUSE AND MAY DAMAGE YOUR HITCH, MACHINE, OR PERSON! DAMAGED HITCHES DUE TO OVERLOADING WILL NOT BE WARRANTED.**

QUESTIONS OR COMMENTS CALL: 320-964-1616

Monday thru Thursday 7:00 to 4:30 CST

INST1177